

sit in joy. krede



K30

Assembly Instructions


krede

Assemble Guide

Headrest Parts




A. Allen Wrench

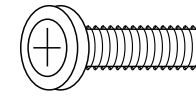

B. M5x12
(2EA)


Backrest Parts

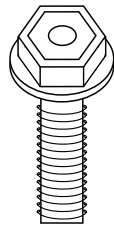

C. M8x20
(3EA)




D. M8x13x2.0
(3EA)

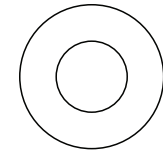

E. M8x20x2.0
(3EA)

Armrest Parts

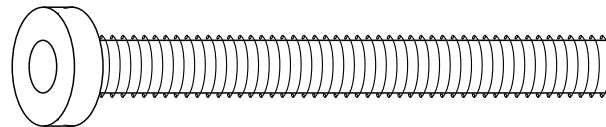


F. M8x40
(4EA)


01 Base and Gas Cylinder Assembly




1. Assemble casters onto the base.

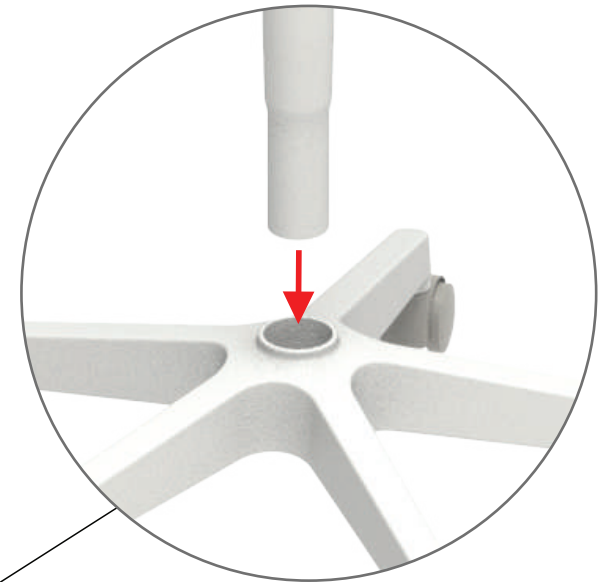

2. Put gas cylinder onto the base.



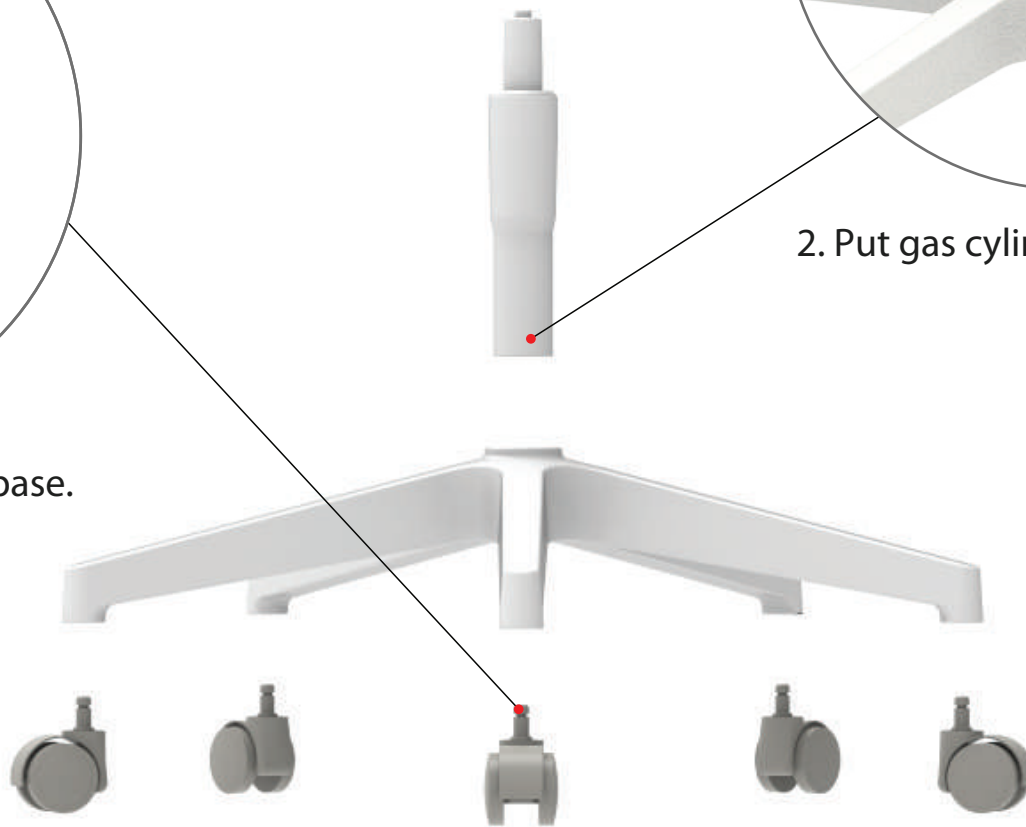


02 Backrest and Armrest Assembly

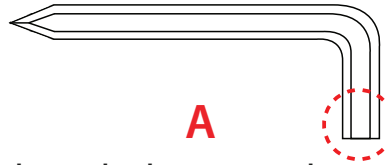


A

Tighten bolts using the side marked with red dotted line.

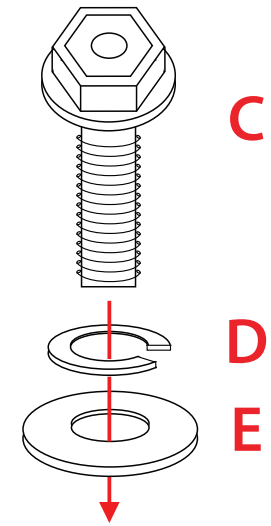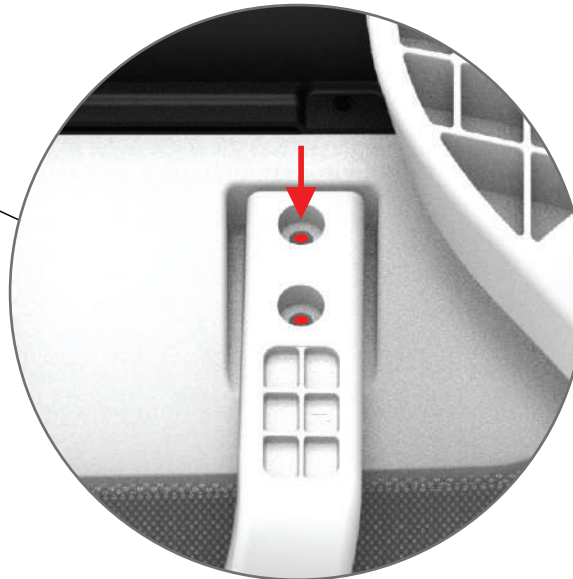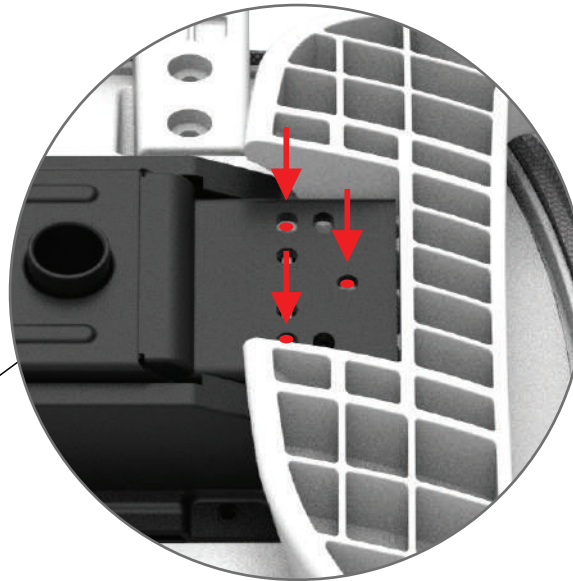

1. Assemble back-rest and tilt tightening bolts in order. (C>D>E)

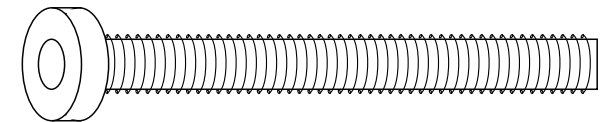

F

2. Assemble arm-rests and back-rest using bolts.





03 Base and Headrest Assembly




2. Join the head-rest post by sliding forward after putting on bottom line of back-rest.

1. Assemble the whole chair by putting pre-assembled chair body onto the gas cylinder assembled with base.

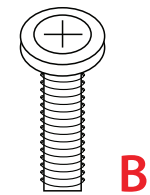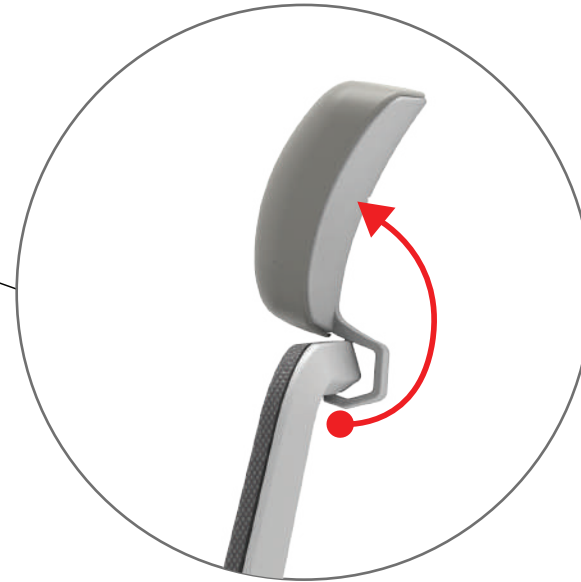


3. Assemble the head-rest and back-rest using bolts.

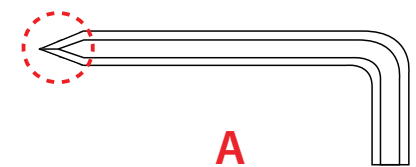

Tighten bolts using the side marked with red dotted line.

■ Synchronized Tilt Mechanism & Lumbar Support

Adjusting the HEIGHT of seat

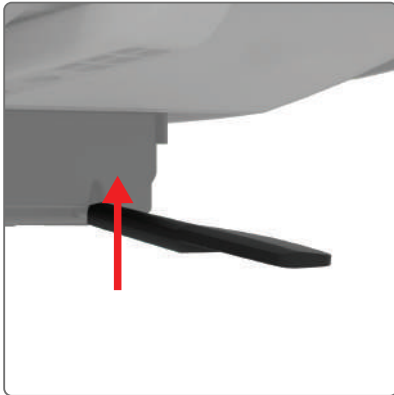


Height can be adjusted by standing up or sitting down pulling the lever upward on the right side.

Weight Balance Tilt




Tilting tension of back-rest would be adjusted according to user's weight.

Seat back TILT LOCK mechanism

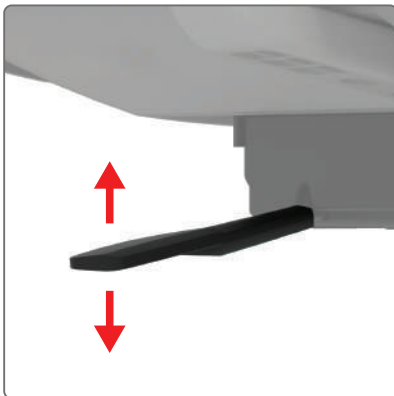

Back-rest can be fixed by pulling the lever upward on the left side counterclockwise while tilting back to the wanting angle. For unlocking, pulling the same lever downward and push the back-rest backward.

Adjusting the HEIGHT of lumbar

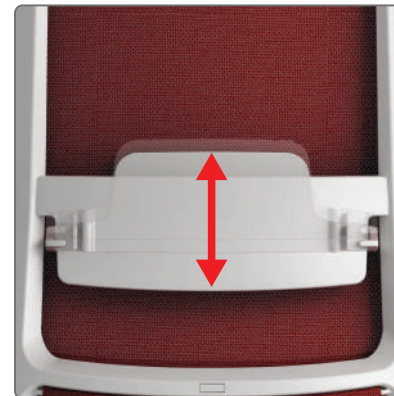

Lumbar pad can be adjusted in height using the knobs on both sides.


■ Armrest

Adjusting the HEIGHT of Armrest



Arm-rests can be adjusted in height by lifting arms pushing buttons.


Adjusting the DEPTH of Armrest

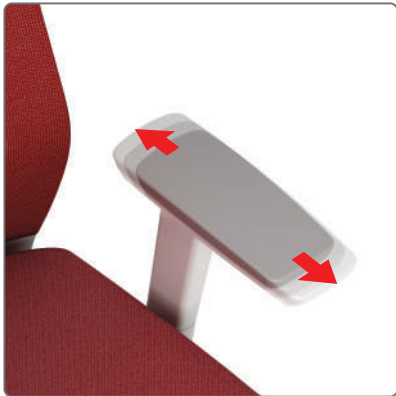

Arm pads can be adjusted in front and back.

■ Headrest & Seat

Adjusting the HEIGHT of headrest

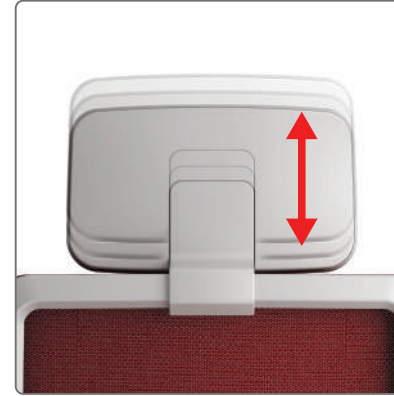

Head-rest can be adjusted in height at any position.

Adjusting the DEPTH of seat



Seat can be moved front and back by pulling the lever on the right side of seat bottom.

krede

주 | 크레디

KREDE CO., LTD.

HEAD OFFICE

A417, 25, Beobwon-ro 11gil, Songpa, Seoul, Korea

T +82. 2. 6254. 5432

F +82. 2. 6254. 5433

sales@krede.co.kr

www.krede.co.kr

* The images in this catalog can differ from the actual product.

Please confirm the actual product before purchase.

* The dimension and design indicated here are subject to change depending on situations involved with product design and manufacturing.